




1. Locate the 4-pin molex power connector from your power supply.

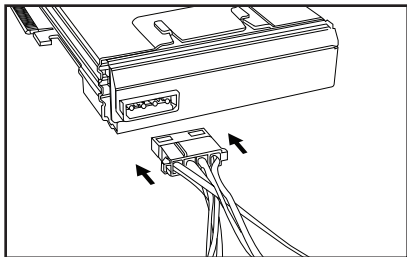

2. Plug the power connector into your Z-Drive

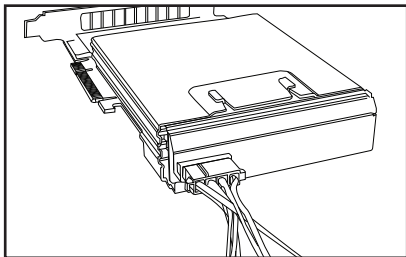

3. Locate an x8 or x16 PCI-Express slot and carefully seat the drive. Be sure you have consulted the motherboard compatibility guidelines before installing the Z-Drive. The motherboard compatibility guideline is available online at www.ocztechnology.com.

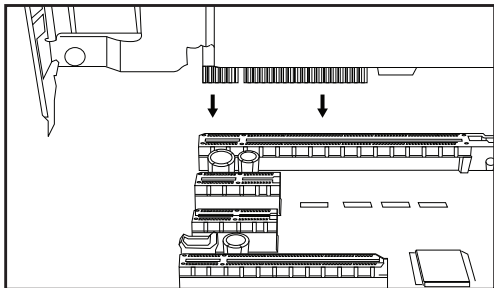

4. To set the Z-Drive as your primary boot device, you must first define in the BIOS. It will appear as a SCSI "LUN0 LSI LOGIC" drive.

If you are using your Z-Drive in a pre-Vista Service Pack 2, you may need to install the appropriate drivers. Drivers are available online at www.ocztechnology.com